



ADJUSTABLE SHOULDER STOCK



REAR BLASTER BODY



FRONT BLASTER BODY  
(METAL BARREL PRE-INSTALLED)



THUMB SCREW X 2



REAR SIGHT



FRONT SIGHT



FRONT HANDLE



PLASTIC BARREL



CONNECTOR PIN X 2



 
O-RINGS X 2



HANDY TOOL



MAGAZINE CLIP  
ADAPTOR



15-DART  
MAGAZINE CLIP  
(SHORT DARTS)



15-DART  
MAGAZINE CLIP  
(REGULAR DARTS)




STANDARD PRO  
DART x15



SHORT PRO  
DART x15

## Assembling your Blaster

Before you start, ensure that you have locked your blaster to avoid a misfire. Press down on the side of the Safety Lock, marked with a "S" (See Picture a).

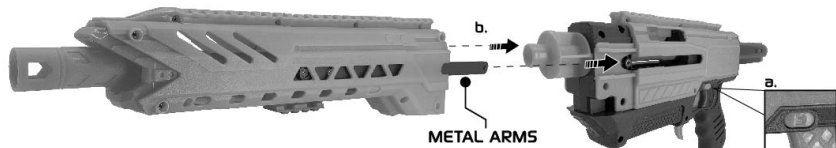


METAL ARMS

SAFETY LOCK

Connecting the two body halves:- Align the two Metal Arms from the Front Blaster Body to the corresponding grooves in the Rear Blaster Body; and push in firmly (See Picture b).




Insert the two metal Connector Pins into the holes, as shown, and push them in (See Picture c).

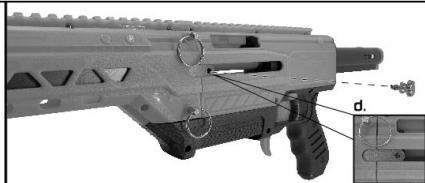

Align the hole at the end of each metal arm with the corresponding screw boss. Insert a Thumb Screw through the metal arm hole and into the screw boss. Tighten. Repeat on the other side (See Picture d).


### Connecting the Shoulder Stock

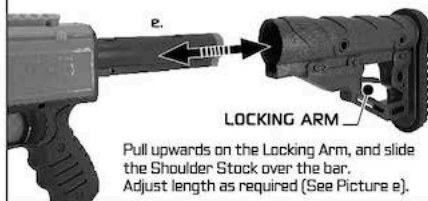

### Attaching the Front Handle



### Loading your Darts

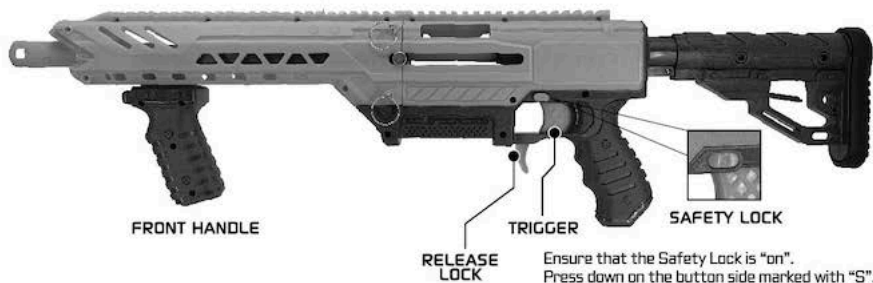

### Standard Pro Dart Magazine Clip



1. Insert 15 Standard Pro Darts, according to the directional arrow.
2. Pull back on the Front Handle until it "clicks". This opens the Magazine Clip Lock.
3. Insert the Standard Pro Magazine Clip into the cavity.
4. Push the Front Handle out again, to lock the Clip into place.
5. Your blaster is now loaded, and you are ready to fire; after you have released the Safety Lock. (Push down on the side marked with "F".)
6. To detach the Clip, push the Release Lock forward; and pull the Clip down and out.
7. To fire again, pull the Front Handle all the way back until it "clicks", and then push the Front Handle all the way forward.

### Short Pro Dart Magazine Clip



1. Insert 15 Short Pro Darts, according to the directional arrow.
2. Pull back on the Front Handle until it "clicks".
3. Insert the Adaptor into the cavity, until it "clicks".
4. Insert the Short Pro Dart Magazine Clip until it locks into place.
5. Push Front Handle forward.
6. You are now ready to fire; after you have released the Safety Lock.
7. To detach the Clip, press down on the Adaptor Release Lock, and pull out the Clip.
8. To detach the Adaptor, push the Release Lock forward and pull it out.

